 


Ditec HA8-SP Easy Selection Guide

PUSH APPLICATIONS

 
1

LPS - Left Hand Push

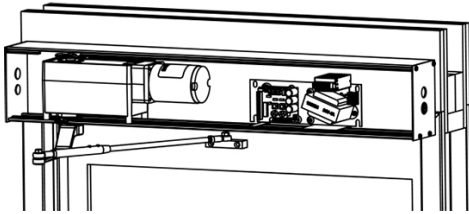

2

RPS - Right Hand Push

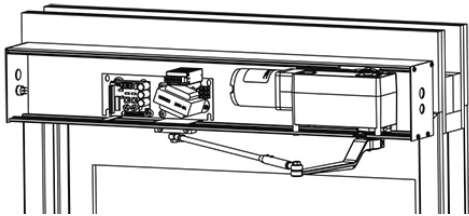


Handing	Finish	Header	Part #
LPS	Clear	39"	W9-101-39
		41"	W9-101-41
		45"	W9-101-45
	Bronze	39"	W9-105-39
		41"	W9-105-41
		45"	W9-105-45
RPS	Clear	39"	W9-103-39
		41"	W9-103-41
		45"	W9-103-45
	Bronze	39"	W9-107-39
		41"	W9-107-41
		45"	W9-107-45
DUAL	Clear	75"	W9-111
	Bronze	75"	W9-112

PULL APPLICATIONS


3

 LPL - Left Hand Pull

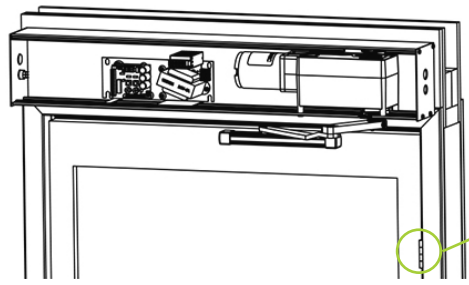

4

 RPL - Right Hand Pull

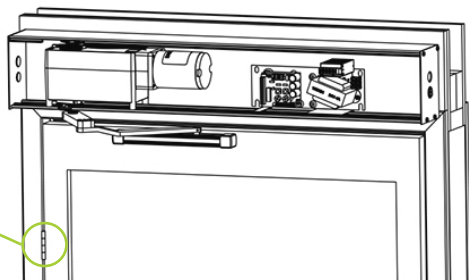

Handing	Finish	Header	Part #
LPL	Clear	39"	W9-102-39
		41"	W9-102-41
		45"	W9-102-45
	Bronze	39"	W9-106-39
		41"	W9-106-41
		45"	W9-106-45
RPL	Clear	39"	W9-104-39
		41"	W9-104-41
		45"	W9-104-45
	Bronze	39"	W9-108-39
		41"	W9-108-41
		45"	W9-108-45
Dual	Clear	75"	W9-113
	Bronze	75"	W9-114

Note: This list represents standard stock configurations. For special sizes or options, please use the code from the "How to Order" sheet or contact Customer Service at 877.348.6837 or Info.Ditec.CA@entrematic.com.